Adapter Removal







- The nie wieder bohren adapter system can be removed from any hard surface by applying torsion
- Step 1 Use a pair of adjustable grips and firmly turn the adapter counterclockwise.
- Step 2 Remove residual adhesive from surface using a razor knife and wipe with acetone remover as needed. For rough surfaces a coarse brush can also be used
- Caution! Use care not to scar the surface with the grips when removing the adapter