

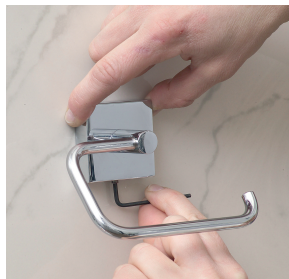


Bath Accessory Installation

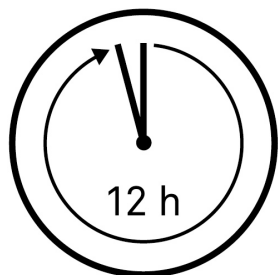

- **Step 1 - Clean surface using a clean dry cloth or use rubbing alcohol to remove any residue (wax, grease, solvents). Allow to dry one hour. Wipe with dry clean cloth to remove any remaining residue. Caution! DO NOT use any household cleaners as they can leave a residue.**
- **Step 2 -** Locate position desired and mark. Remove protective paper from foam securing ring and apply firm pressure for 4 seconds. It is no problem to mount the adapters directly over the grout line if needed.
- **Step 3 –** Use the red key end to puncture the adhesive tube. Slide tube end into slot in red key and turn the key until firm. Insert tube end into large hole of the adapter. Turn the red key slowly forcing the adhesive into the adapter base until the white adhesive beads up out of the vent hole. **Caution! DO NOT apply any pressure or disturb the adapter once the adhesive has been inserted. Clean excess glue after Step 4**
- **Step 4 –** Allow adapter to cure (harden) for 12 hours undisturbed before attaching your accessory. Remove any excess adhesive once dry.
- **Step 5 –** Mount your accessory using the tool provided and enjoy!
- *Note: For **dry wall** application, we offer the interchangeable patented no drill mounting hardware (pictured left). This system mounts with just a screwdriver and holds 35lbs! Part number DW20*

Note: Surface must be able to bear load of accessory. Not intended for use on Polyethylene (PE) Polypropylene (PP), Polytetrafluoroethylene (PTE, Teflon) as they do not allow for proper adhesion

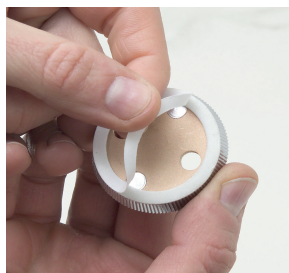


no drilling required.

Installation Tips -Two Post Accessories



- **For accessories with more than one adapter:**

- Use small piece of packaging & insert into base behind adapter
- Carefully insert adapters into the accessory & lightly fasten with tool (the packaging will keep the adapter sitting tall which allows for easy attachment of the adhesive ring)
- Remove protective paper from foam securing ring and apply firm pressure for 4 seconds. Hold accessory up to the marks and press adapters firmly into place
- Carefully remove accessory and both round mounting adapters are now perfectly positioned on the wall and ready for adhesive.
- Follow instructions for adhesive insertion and curing on page one
- *For Dry wall mounting, follow same steps, insert into each side, press barbed plate into dry wall, remove and mark center hole for insert.*

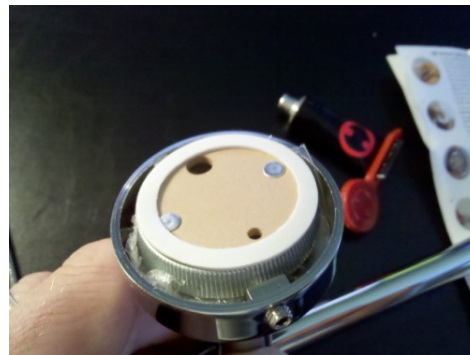

no drilling required.