

# Shower Bar Installation

Clean surface with supplied alcohol pad and let dry completely. If the surface has scaling or hard water residue, it may be necessary to first clean with a fine 320 grit or finer wet/ dry abrasive paper. This will not scratch the surface but will remove any heavy residue. Allow surface to dry fully! Do not use household cleaners.

**Step 1:** Remove chrome cover cap from each of the two chrome posts and carefully loosen dual set screws (white nylon)

**Step 2:** Slide the adjustable holder onto middle of the bar by squeezing the button. Slide ends pieces onto each end of bar and lightly tighten dual set screws




**Step 3:** Position in shower to optimum height and adjust chrome post to desired position. Tighten dual set screws until firm (do not over tighten)

**Step 4:** Attach adapter to each end post using the supplied screws.

**Step 5:** Carefully peel protective foam ring cover and press in place on shower wall. Unscrew adapter and remove bar. Adapters are now properly positioned on the wall.

**Step 6:** Pierce adhesive tube with red key end and then slide tube end into slot in red key. Gently roll tube end and inject into one hole until it beads up the opposite check hole. **Let stand undisturbed for 12 hours.**

**Step 7:** Assemble bar to adapter with screws and attach the hand shower.

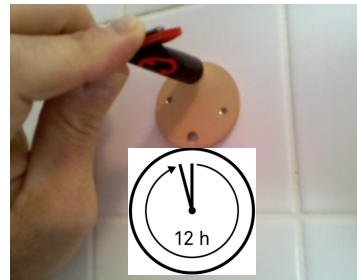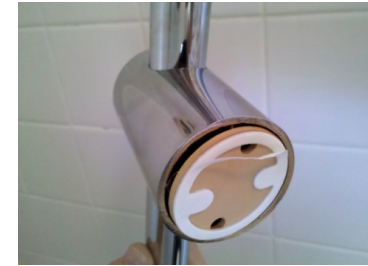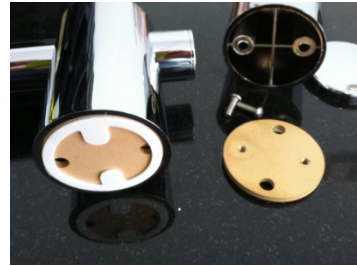

no drilling required.

For BT481P-CHR – watch installation video at [www.nodrillingrequired.com](http://www.nodrillingrequired.com)